



"Cheat sheet for firmware 1.00"

Global functions

Start / Stop master clock
Show Tempo

START / STOP
TEMPO

Enter config menu

SHIFT + ENTER

Transpose internal keyboard
Switch channels
Swap channels

UP / NORM / DOWN
CHAN
SHIFT + CHAN

Volume Accent modifier
Filter Accent modifier
Portamento modifier
Noise trigger modifier

ACC (TAP)
ENTER
PORTA (TAP)
BAR

Sequencer
Pattern editor
Song editor
Arpeggiator
Quick song recording

PLAY
EDIT
SHIFT + EDIT
SHIFT + PLAY
hold PLAY, select patterns

Copy Pattern (except in EDIT mode)
Paste Pattern (except in EDIT mode)

SHIFT + COPY
SHIFT + DEL (MEAS)

Normal mode (Playing on keyboard)

Toggle HOLD	SHIFT + TEMPO
Instant modifiers	Press modifier buttons
Cycle portamento mode	SHIFT + PORTA
Toggle retrigger mode	SHIFT + BAR
Mute/Unmute drums (drum channel only)	SHIFT + keyboard keys
Load Set	SHIFT + LOAD
Save Set	SHIFT + SAVE
Open Set Menu	SHIFT + VERIFY
Toggle notation mode	SHIFT + 'b'

Sequencer mode

Start sequencer on next beat	PLAY (when sequencer is stopped)
Stop sequencer	PLAY
Instant modifiers	Press modifier buttons
Shift one step forward	SHIFT + FWD (STEP)
Shift one step backwards	SHIFT + BACK (STEP)
Instantly switch pattern	Press keyboard keys
Sequencer directions:	
UP	SHIFT + UP
Ping-Pong 1	SHIFT + NORM
DOWN	SHIFT + DOWN
Ping Pong 2	SHIFT + UP + DOWN
Random	SHIFT + UP + NORM + DOWN
Random offset	SHIFT + NORM + UP
Random offset reversed	SHIFT + DOWN + NORM
Transpose sequence (non drum channels)	SHIFT + keyboard keys
Mute/Unmute drums (drum channel only)	SHIFT + keyboard keys

Pattern editor

Enter pattern editor	EDIT
Select pattern to edit	Hold down EDIT, select patterns
Exit pattern editor	EDIT
Move forward / backward in sequence	FWD / BACK (MEAS)
Shift sequence forward /backward	FWD / BACK (STEP)
Modify current note	Press keyboard keys
Modify current note's modifiers	Press modifier buttons
Modify current note's length	SHIFT + STACC, NON LEG, ...
Enter break	SHIFT + 0 REST
Add new note	FWD to end of sequence, display shows "+". enter modifiers, length and press keyboard key to enter
Insert a new note in the middle of the sequence	SHIFT + INS
Delete a note	SHIFT + DEL (STEP)
Copy a note	SHIFT + Copy
Paste a note	SHIFT + DEL (MEAS)

Song editor

Enter song editor	SHIFT + EDIT
Move forward / backward in song	FWD / BACK
Modify current pattern	Press keyboard keys
Add new pattern	FWD to end of song, display shows "+". Press keyboard key to enter
insert a new pattern in the middle of the song	SHIFT + INS
Delete a pattern	SHIFT + DEL (STEP)
Copy a pattern	hold SHIFT + Copy, press keyboard
Paste a pattern	hold SHIFT + DEL (MEAS), press key

Quick song recording

Hold PLAY, select patterns using keyboard. When finished, release PLAY. New song will start once currently playing pattern is finished.

ARP

Enter ARP mode
Toggle HOLD / Latch

SHIFT + PLAY
SHIFT + TEMPO

Arp directions:

UP
Ping-Pong 1
DOWN
Ping Pong 2
Random
Key Order
Key Order reversed

SHIFT + UP
SHIFT + NORM
SHIFT + DOWN
SHIFT + UP + DOWN
SHIFT + UP + NORM + DOWN
SHIFT + NORM + UP
SHIFT + DOWN + NORM

Select chemistry pattern
Clear chemistry pattern

INS (STEP) + keyboard key
INS (STEP) without keyboard key

Transpose arpeggio

SHIFT + keyboard key

Instant modifier addon

Press modifier keys

ARP – Euclidian mode

Toggle Euclidian mode
Shift Euclidian sequence forward
Shift Euclidian sequence backwards

DEL (STEP)
SHIFT + COPY (STEP)
SHIFT + DEL (STEP)

Config menu

Enter config menu
Navigate config menu
Select /enter
Back, exit config menu

SHIFT + ENTER
FWD (MEAS), BACK (MEAS)
ENTER
TAP