

CeeS installation manual

for Yamaha CS30L

Introduction

This guide shows how to install the Tubbutec CeeS upgrade in a Yamaha CS30L synthesizer. It is a relatively easy install, but basic soldering and metal working skills are necessary. You will need to solder 20 castellated pins with 2.54mm pitch and 5 wires. You will also need to drill 6 holes in order to install the MIDI sockets.

Tubbutec does not take any responsibility for damage caused by an improper installation.

Tools needed

- Screw driver
- Soldering iron
- Center punch
- Metal drill: 3.2mm – 3.5mm (1/8" should work fine)
- Stepping drill to create 14mm or 15mm (9/16" or 19/32") holes
- Cable ties

Please note


This guide is based on our experience with the CS30 synth and the CS30L service manual. Pictures shown here are from a CS30, but it uses the same boards as the 30L. If you encounter any discrepancies, let us know and we can help.

Installing the CeeS board


Remove the 4 screws of the SSK board in order to access rear side of it. The board is located left to the keyboard.

You can now solder the CeeS board in place below the key assigner IC as shown. Note the correct orientation.

Plug in the 8 pin connector and solder the black wire. This is the GND connection.

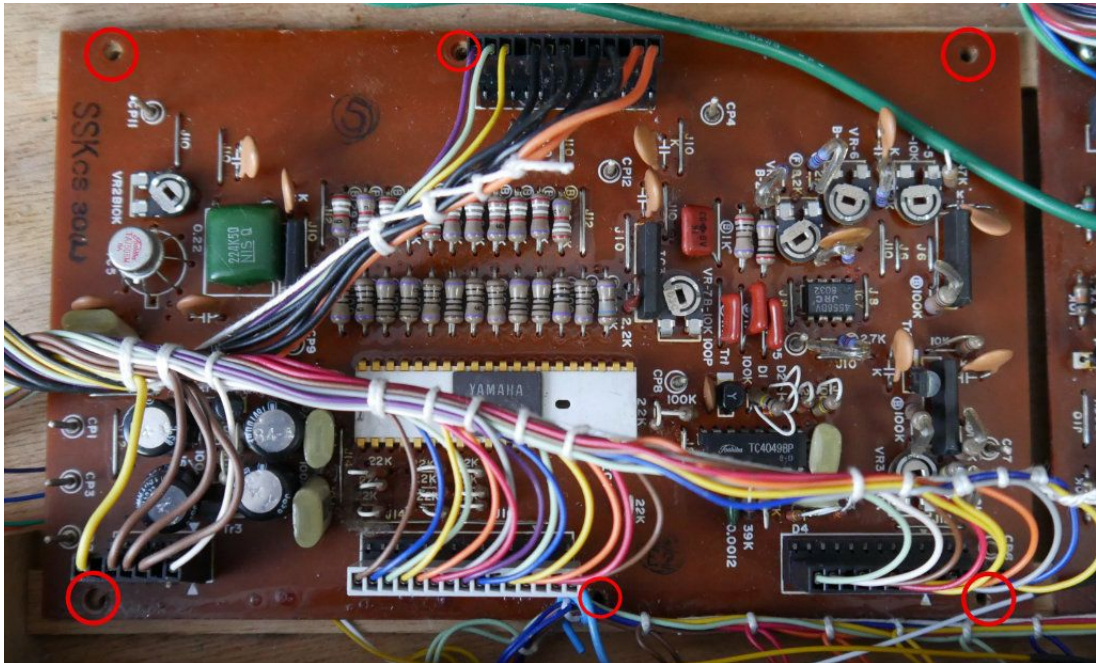


Remove these 4 screws of the CS30 key assigner board

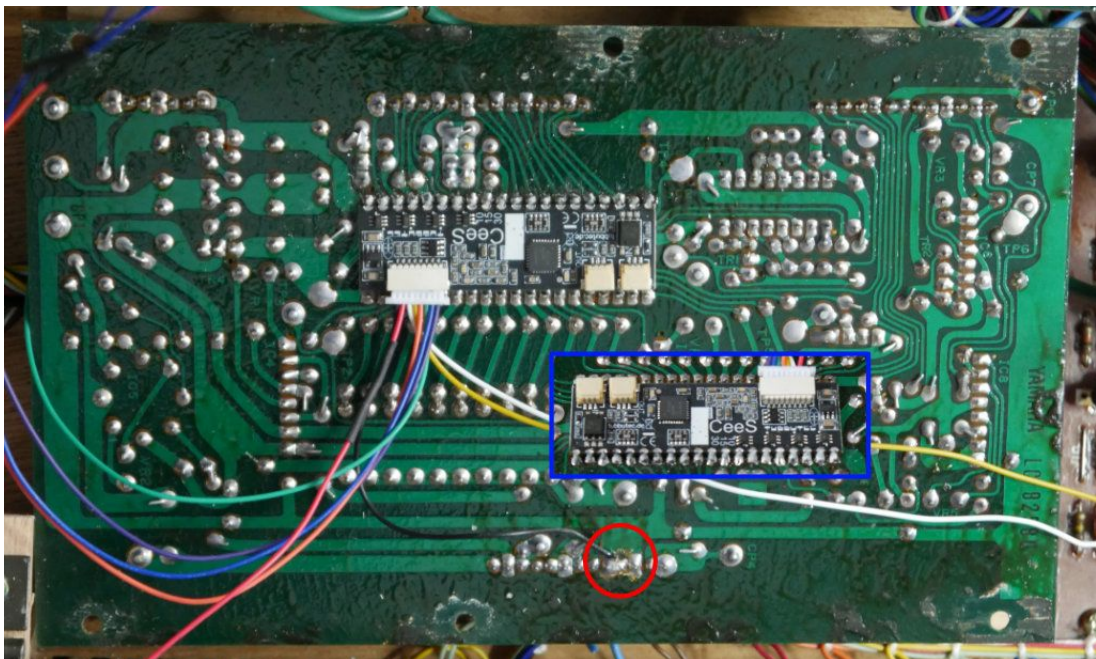


The soldered CeeS board and the black wire soldering point

Soldering the filter wires

In order to get control of filter cutoff and resonance, four wires need to be soldered to the back of the filter board. Solder the blue, orange, purple and green wires to the points shown in the picture below.

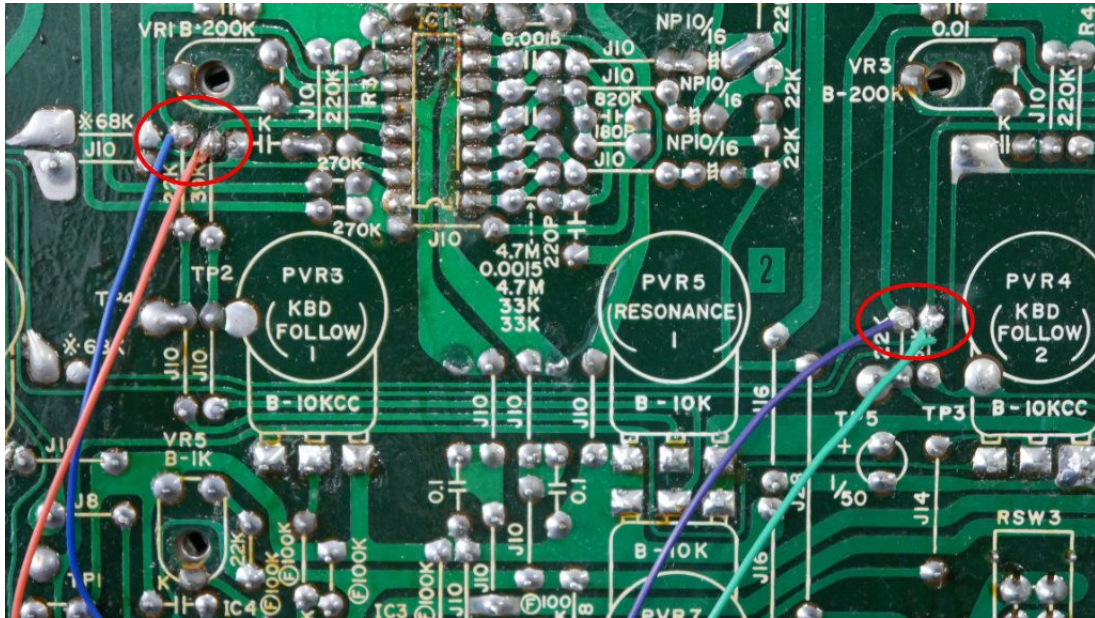

Soldering points for the filter control wires, board version 2

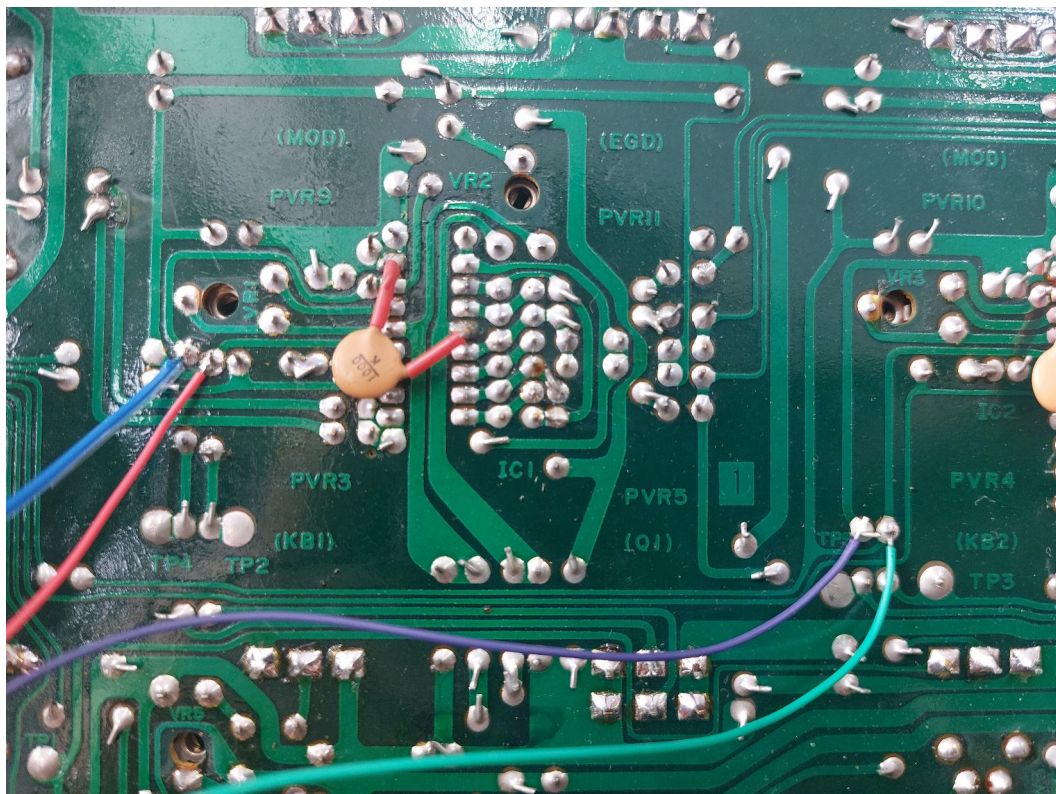

Soldering points for the filter control wires, board version 1

Installing the MIDI sockets

At a location of your choice, put the provided drill aid on the back of the CS30L and fix it with some tape.


The picture below shows a possible location. [Note: these pictures are from a CS30] When deciding the location, just make sure there is space behind the panels for the sockets.

Next, use a center punch to mark the location of the holes. Drill the 4x 3.5mm holes and the 2x 15mm holes. For the 15mm holes you can use a stepping drill, a 15mm drill, or a punch and die system.



Carefully put the overlay sticker at the correct location.

Finally, mount the MIDI sockets with the bolts and nuts provided, and connect them to the CeeS board. The MIDI socket with two wires is the MIDI in socket, the one with three wires is MIDI out. **Make sure not to swap them.**

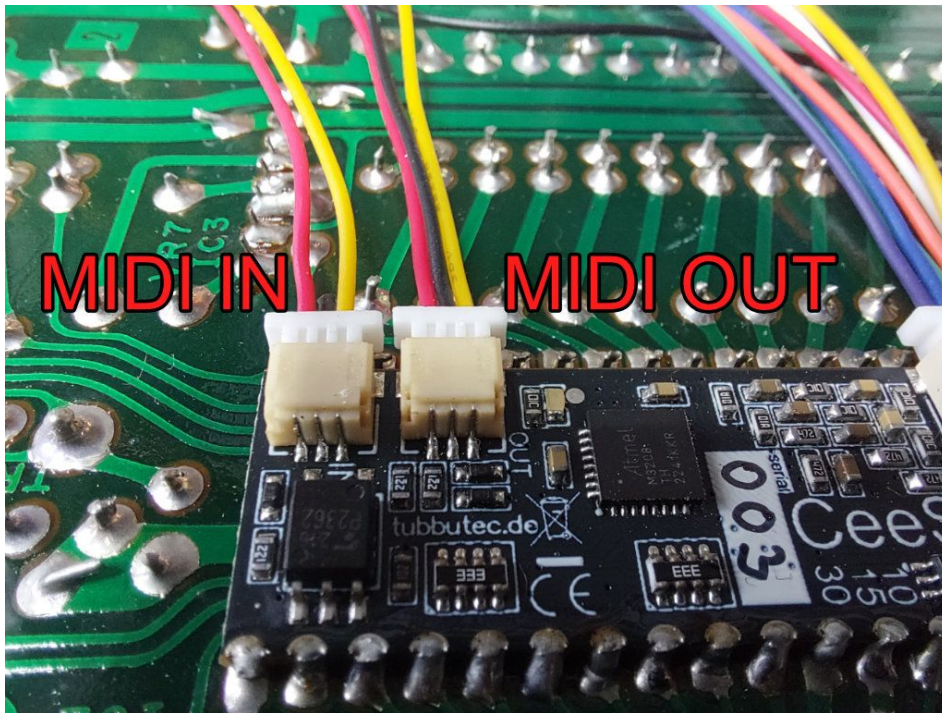

MIDI connections. Note the 2-wire connector on the left and the 3 wire connector on the right



The installed MIDI sockets and overlay

Testing

The CeeS boards are of course fully tested by us. However, it is advised to test all functions after installation to rule out any installation errors.

After the installation turn on the CS30L. A small red LED on the CeeS board should light up and the synthesizer work normally.

MIDI input test

Connect a MIDI keyboard or computer to the MIDI-IN socket. When sending notes in the correct range on MIDI channel 1, the notes should play and the red LED blink whenever notes are received.

In order to test the filter control, we recommend sending the cutoff and resonance MIDI CC messages from a DAW or MIDI controller:

Cutoff filter 1: CC #16

Cutoff filter 2: CC #17

Resonance filter 1: CC #18

Resonance filter 2: CC #19

MIDI output test

Connect a synthesizer or computer to the MIDI-out socket. Pressing keys on the CS30 keyboard should result in MIDI notes being sent.